

MONTERINGSBESKRIVNING

Huvudkontor: Nola Industrier AB Box 17701 Repslagargatan 15b
118 93 Stockholm T: 08 702 1960 F: 08 702 1962 headoffice@nola.se
Kundtjänst/showroom/export/press: Skeppsbron 3 211 20 Malmö
T: 040 171 190 Orderfax: 040 127 545 order@nola.se

nola

www.nola.se

Installation

1. The post attaches to the base using the M10 bolts provided. For best results, attach the post to a pre-cast concrete foundation. We suggest that a chemical anchor is also applied to reinforce the base's adhesion to the surface beneath it.
2. Once the concrete surface is ready for use, position the base in place and mark where each of the three holes should be drilled into the surface. Use the chemical anchor to attach the base to the surface.
3. Once the chemical anchor has set, position the post in place and insert each of the three M10 bolts provided into the holes near the bottom. Use an appropriate tool to screw the bolts all the way into the base plate. Tighten the bolts evenly to ensure that the post stands level on the base plate when viewed from several directions.

Maintainance


Scratches to the painted finish can be treated with alkyd oil enamel as needed. Clear-lacquered matt aluminium does not normally require maintenance.

Product code

Ö04-20 Fogdarp bicycle stand

Delivery specifications

1 Fogdarp bicycle stand and three M10 bolts

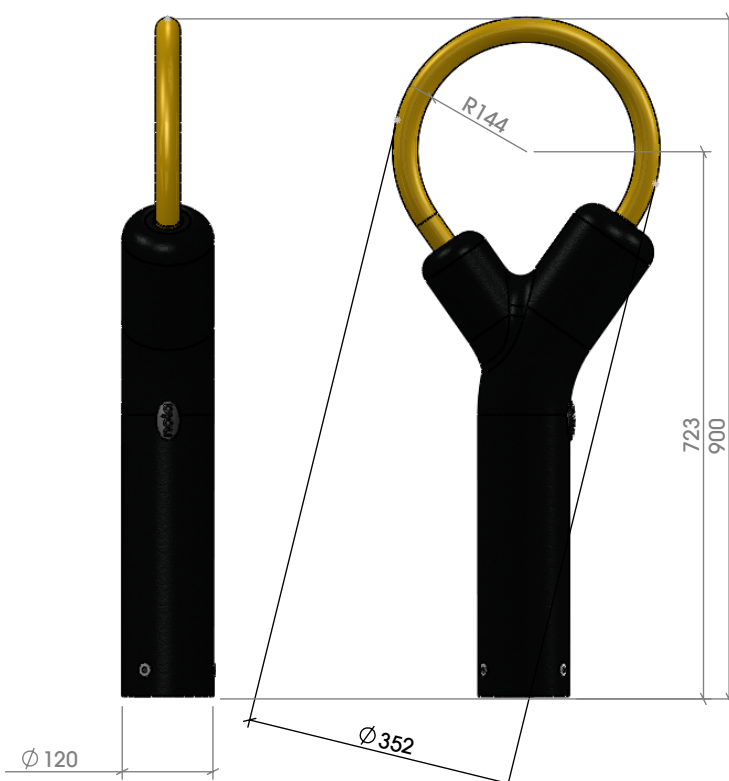

Mounting bracket

Scale 1:2 (in A4)

