
Ribb page 1/3

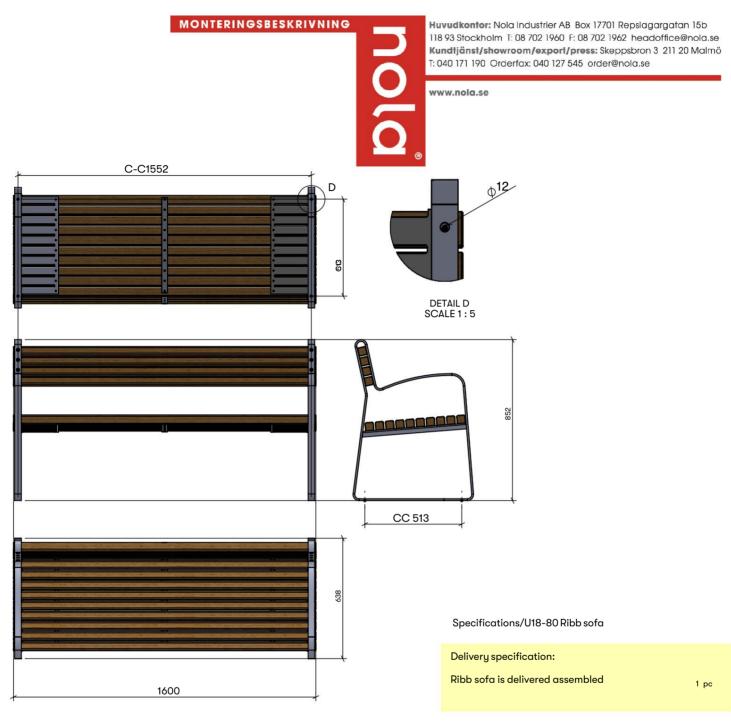

Assembly Ribb sofa:

Ribb sofa is delivered assembled and equipped with a hole in the foot for mounting on a flat surface.

Hole diameter 12 mm, intended for M10 fasteners. Number of attachment points 4/stand. ATTENTION!

Bolts for fixing to the ground are not included in the delivery.

Installation on a wooden substrate/ Pre-drill and mount with wood screws to the substrate.


Installation on paving stones or paving slabs/Undercast the tiles with concrete in the places where the product is to be screwed. There must be no setting sand between the tiles and the concrete. Set up the product and mark the holes. Drill through the slab/stone into the concrete. Mount the sofa with chemical anchors or expanders.

Installation on a concrete base/ Display the product, mark the hole image and pre-drill. Mount with chemical anchors or expanders.

Installation on a concrete base/ Display the product, mark the hole image and pre-drill. Mount with chemical anchors or expanders.

Installation on gravel, - grass surfaces/ Excavate the ground to a frost-free depth. Prime with draining material. Use prefabricated foundations, or cast in place in pipes (cardboard or concrete) or directly in the pit. Drill the foundation and fasten the sofa with chemical anchors or expanders.

Ribb page 2/3

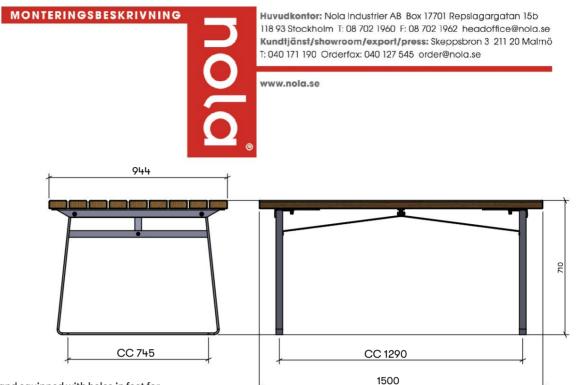

Assembly Ribb table:

Slatted table partially assembled and equipped with holes in feet for mounting on a flat surface. Hole diameter 12 mm, intended for M10 fasteners. Number of attachment points 4/stand. ATTENTION! Bolts for fixing to the ground are not included in the delivery.

1) Place the table top upside down, for example use a blanket to protect the table surface. (See picture on page 3)

2) Then mount the leg brace against the fittings in the table top with the supplied screw. The stiffening rods are then mounted.

3) Turn the table right up side up. If the table is to be mounted against the ground, there are different ways to do this. See text below.

Installation on a wooden substrate/ Pre-drill and mount with wood screws to the substrate.

Installation on paving stones or paving slabs/Undercast the plates with concrete in the places where the product is to be screwed. There must be no setting sand between the tiles and the concrete. Set up the product and mark the holes. Drill through the slab/stone into the concrete. Mount the sofa with chemical anchors or expanders.

Installation on a concrete base/ Display the product, mark the hole image and pre-drill. Mount with chemical anchors or expanders.

Installation on a concrete base/ Display the product, mark the hole image and pre-drill. Mount with chemical anchors or expanders.

Installation on gravel, - grass surfaces/ Excavate the ground to a frost-free depth. Prime with draining material. Use prefabricated foundations, or cast in place in pipes (cardboard or concrete) or directly in the pit. Drill the foundation and fasten the sofa with chemical anchors or expanders.



Specifications/U18-82 Ribb table

Delivery specification:

Ribb table is delivered partially assembled 1pc

Rib page 3/3



Huvudkontor: Nola Industrier AB Box 17701 Repslagargatan 15b 118 93 Stockholm T: 08 702 1960 F: 08 702 1962 headoffice@nola.se Kundtjänst/showroom/export/press: Skeppsbron 3 211 20 Malmö T: 040 171 190 Orderfax: 040 127 545 order@nola.se

www.nola.se

