
# AssemblyInstructions

# Korg Furniture series

## List of contents

Product overview Korg Furniture Group	s. 2
Product overview Korg Bar Furniture	s. 3
Product overview Korg Swing sofa	s. 4
Dimensional specification Korg Furniture Group	s. 5
Dimensional specification Korg Bar Furniture	s. 6
Dimensional specification Korg Swing sofa	s. 7
Assembly Table	s. 8
Assembly Korg Furniture Group	s. 9-10
Assembly Bar Furniture	s. 11-12




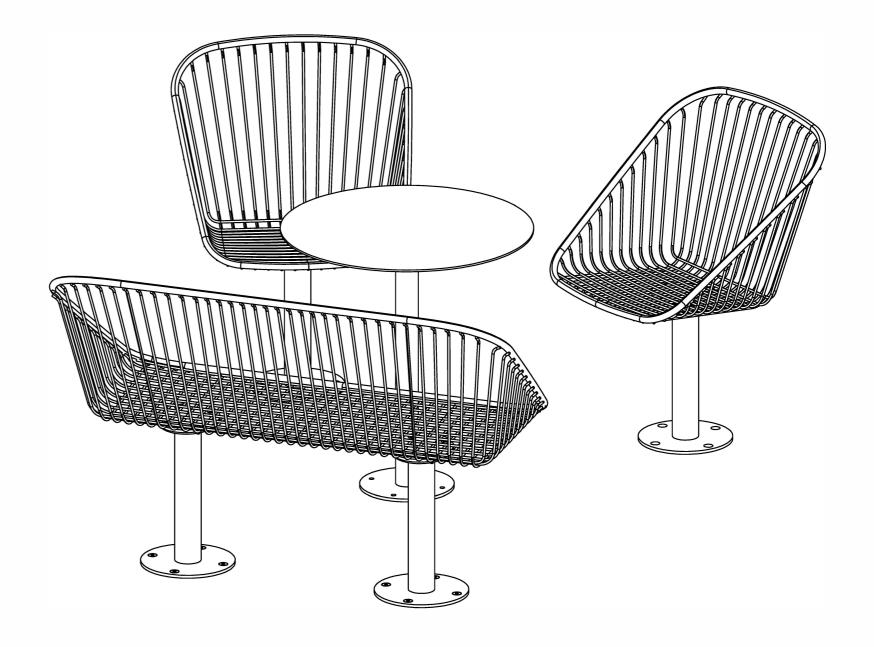


# Korg Furniture series Product overview Korg Furniture series




U12-31N Korg Armchair
U12-30N Korg Armchair, swivel version

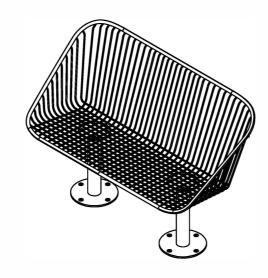

U12-32N Korg Park bench

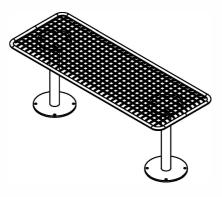


U12-37N Korg Bench

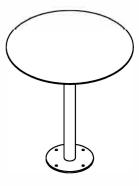


U12-34N Korg Table




U12-31M Korg Armchair
U12-30M Korg Armchair, swivel version

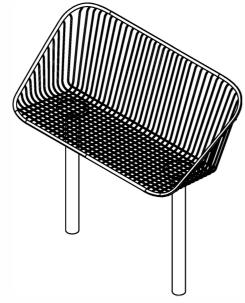

U12-32M Korg Park bench

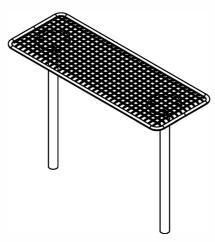


U12-37M Korg Bench

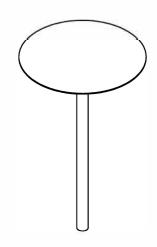

U12-34M Korg Table

## Korg Furniture series Producut overview Korg Bar furniture


U12-34N-BAR Korg Bar table
U12-34N-BARLAM Korg Bar table
with laminated table top

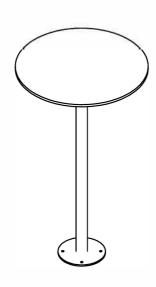

U12-33N Korg Bar chair U12-33N-SNURR Korg Bar chair, swivel version



U12-34M-BAR Korg Bar table U12-34M-BARLAM Korg Bar table with laminated table top

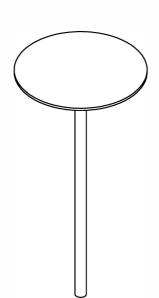

**U12-33M** Korg Bar chair **U12-33M-SNURR** Korg Bar chair, swivel version






# Korg Furniture series Product overview Korg Swing sofa



**U12-38N** Korg Swing sofa and **U12-38T** Roof for Korg Swing sofa (roof only)



# Korg Furniture series Dimensional specification Korg Furniture group

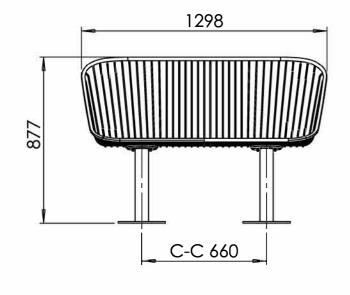








### **Korg Furniture group**


The furniture group consists of a park bench, armchair, bench and table. All products in the furniture group are available with two installation type options, Surface mount  ${\bf N}$  or In-ground  ${\bf M}$ .

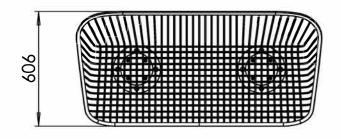

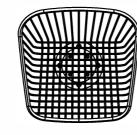


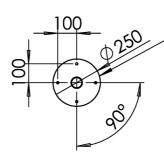



Foot plate for all Korg furniture in the Furniture Group. Surface mount **N** option.

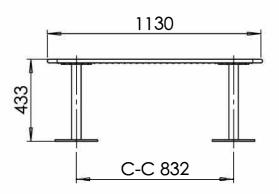



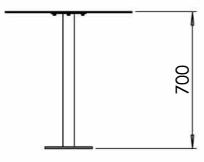





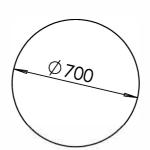






# Korg Furniture series Dimensional specification Korg Bar furniture

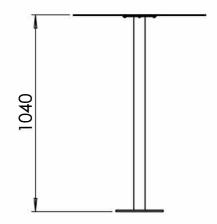


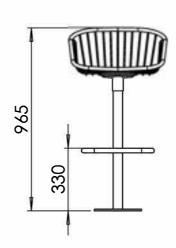

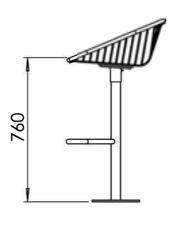

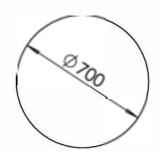

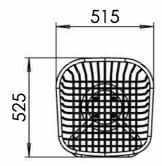

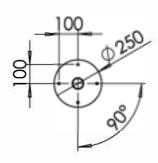

### Korg Bar Table and Bar Chair

The bar furniture uses the same footplate as other furniture in the Korg Furniture Series. They are also available in the options of Surface mount N or In-ground M stand.

The bar chair is available as both fixed and swivel version.

The bar table is available with both a table top in electro-galvanized and powder-coated steel and in laminate.

#### SU12-34-BARLAM


The table top can be obtained with any graphic print, such as a game board or logo.


Ready-made game boards available to order: Chess, Fia and Othello.

Contact Nola for more info.


# Korg Furniture series Dimensional specification Korg Swing sofa


U12-38N Korg Swing sofa

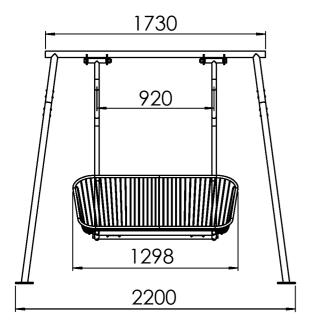


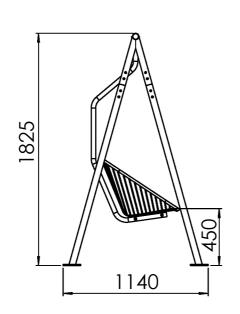



**U12-38N** Korg Swing sofa and **U12-38T** Roof for Korg Swing sofa (roof only)

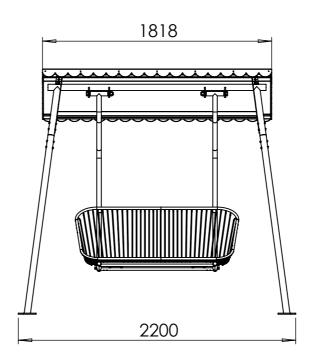

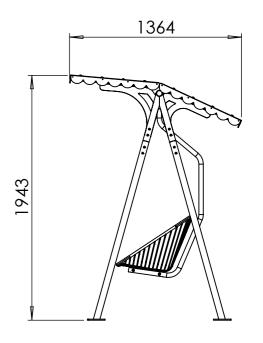

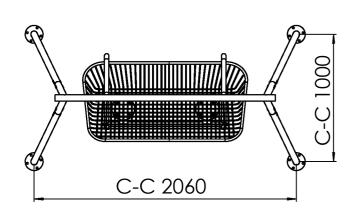

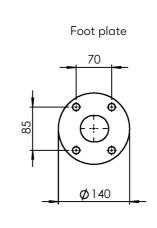

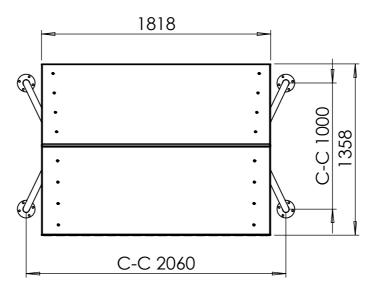


## Korg Swing sofa


Korg Swing sofa is delivered assembled. Korg Swing sofa and Roof for Korg Swing sofa are sold separately but are delivered assembled when ordered together, so no assembly is required, just surface mounting.

See more information on Korg Swing sofa product page on our website.



# Korg Furniture series Assembly Table

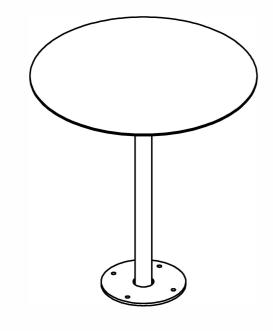

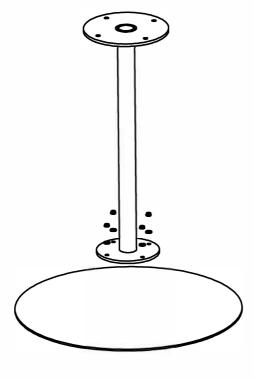


### Table Assembly


Turn the table top upside down, making sure to place it on some protective material so that the paintwork is not damaged. Mount the stand to the table top with the enclosed M8 locknut and washers.


**NOTE!** Take care when tightening the nuts. With too much force, a single stud screw can break. The nuts do not need more force than for the contact surfaces to meet and after that the nuts are tightened a maximum of 1/4 turn.



# Korg Furniture series Assembly Korg Furniture group

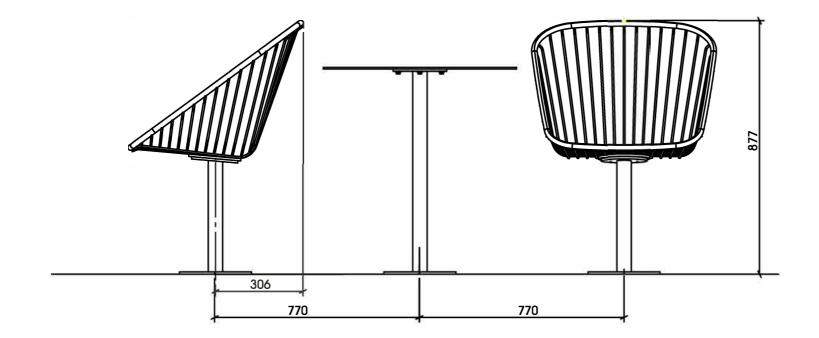

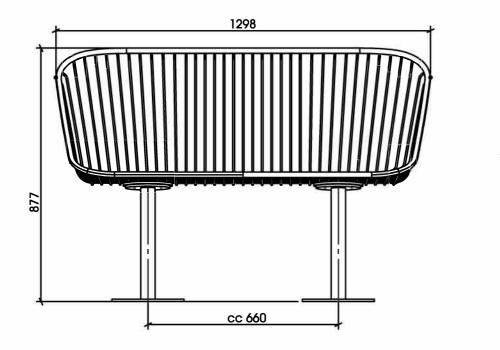

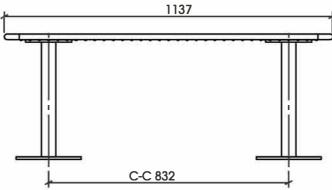

#### Surface mount/N

The attachable model has a perforated footplate for mounting with an M10 screw.

**NOTE!** The leg should always be mounted on the sofa when it is screwed to the ground. Since the seat tilts, this is important because a small angle deviation can mean that the sofa cannot be mounted even if the C-C measurement is correct.

### Mounting on a wooden base

Mount with a French wood screw to a wooden base.

### Mounting on paving stones or street tiles

Cast the tiles under with concrete. There must be no settling sand between the tiles and the concrete. Drill the tile for expanders or chemical anchors.

### Mounting on concrete or stone blocks, etc.


Mount with chemical anchors or expanders as above. Mounting with expanders provides a removable attachment.

**NOTE!** When a chair is mounted with an accompanying table, the measurement between the center of the chair leg and the table leg must be around C-C 770 mm.

This is so that the back of the chair does not hit the edge of the table when the chair is spun around, but is still at a comfortable sitting distance from the table.



# Korg Furniture series Assembly Korg Furniture group

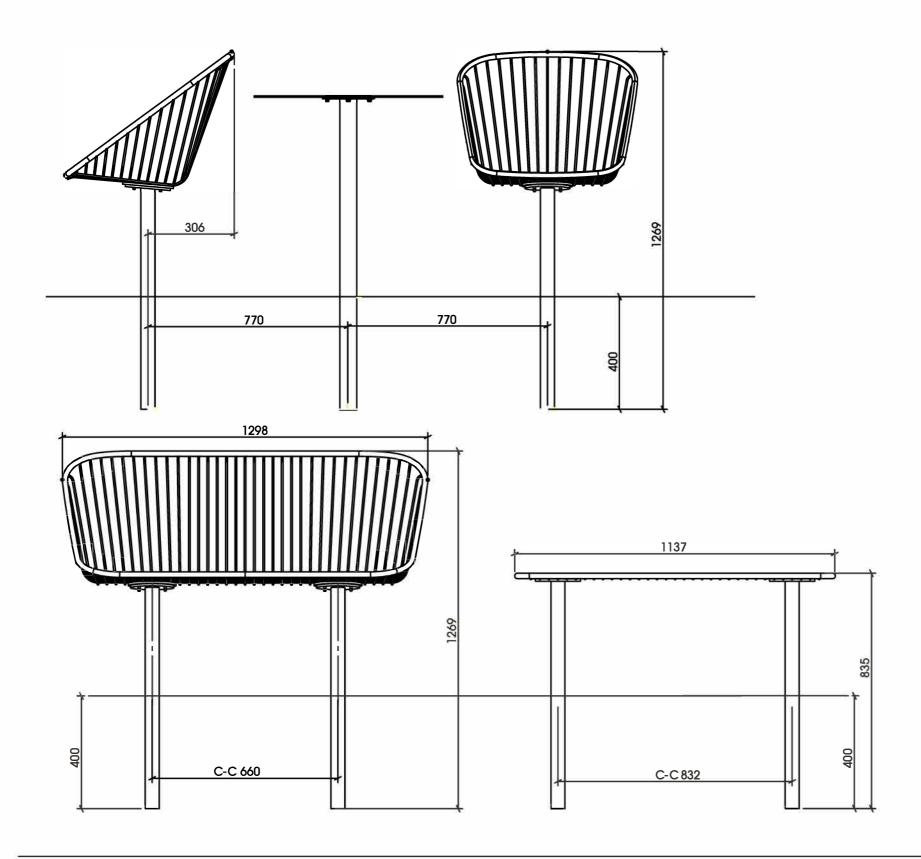

#### In-ground/M

Dig a hole in the ground with a diameter of approximately 400 mm. Dig to a frost-free depth. Foundation with non-frost-resistant material so that the depth of the hole is approximately 500 mm.

Set up the armchair with the leg in the dug hole.

Brace the armchair both vertically and laterally.

The tube that forms the front edge of the chair seat should be approximately 420 mm above the finished ground surface.

Cast the leg into the ground with concrete. The concrete should not go all the way up to the ground surface but end approximately 50 mm below the ground surface.


Backfill the ground and complete the ground surface.


**NOTE!** When the chair is mounted with an accompanying table, the measurement between the center of the chair leg and the table leg must be around C-C 770 mm.

This is so that the chair back does not hit the edge of the table when the chair is spun around while still being at a comfortable sitting distance but from the table.



# Korg Furniture series Assembly Bar furniture

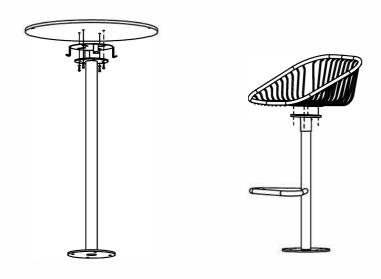

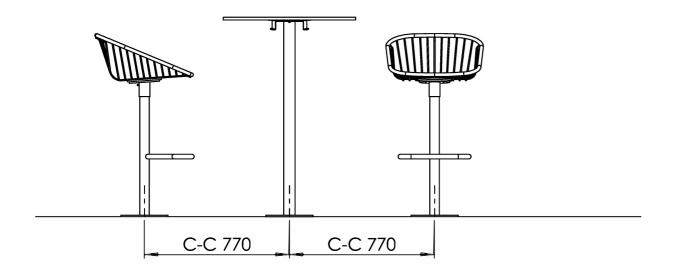

#### Table and Chair Assembly

Assembly is done with 4 screws and washers included.

#### Surface mount/N

The surface mount version has a perforated footplate for assembly with four M10 screws.

**NOTE!** The leg should always be mounted on the furniture before it is screwed to the ground. Since the seat tilts, this is important because a small angle deviation can mean that the sofa cannot be assembled even if the C-C measurement is correct.

#### Assembly on a wooden base

Assembly with a French wood screw to a wooden base.

### Assembly on paving stones or street tiles

Undercast the tiles with concrete. There must be no settling sand between the tiles and the concrete. Drill the tile for expanders or chemical anchors.

### Assembly on concrete or stone blocks, etc.


Assembly with chemical anchors or expanders as above. Assembly with expanders provides a removable attachment.

**NOTE!** When the chair is assembled with an accompanying table, the measurement between the center of the chair leg and the table leg must be around C-C 770 mm.

This is so that the back of the chair does not hit the edge of the table when the chair is spun around, but is still at a comfortable sitting distance from the table.



# Korg Furniture series Assembly Bar furniture

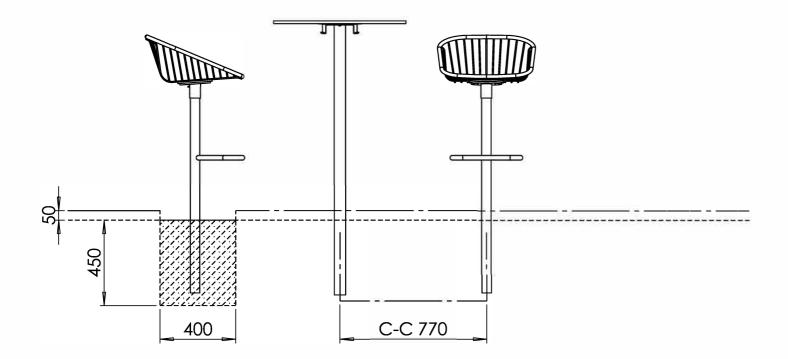

### In-ground/M

Dig a hole in the ground with a diameter of approximately 400 mm. Dig to a frost-free depth. Foundation with non-frost-resistant material so that the depth of the hole is approximately 500 mm.

Set up the chair with the leg in the dug hole.

Stabilize the chair both vertically and laterally.

Cast the leg into the ground with concrete. The concrete should not go all the way up to the ground surface, stop approximately 50 mm below the ground surface.

Backfill the ground and complete the ground surface.

**NOTE!** When a chair is assembled with an accompanying table, the measurement between the center of the chair leg and the table leg must be around C-C 770 mm.

This is so that the chair back does not hit the edge of the table when the chair is spun around but is still at a comfortable sitting distance from the table.

