Assembly instructions

Cane Europa
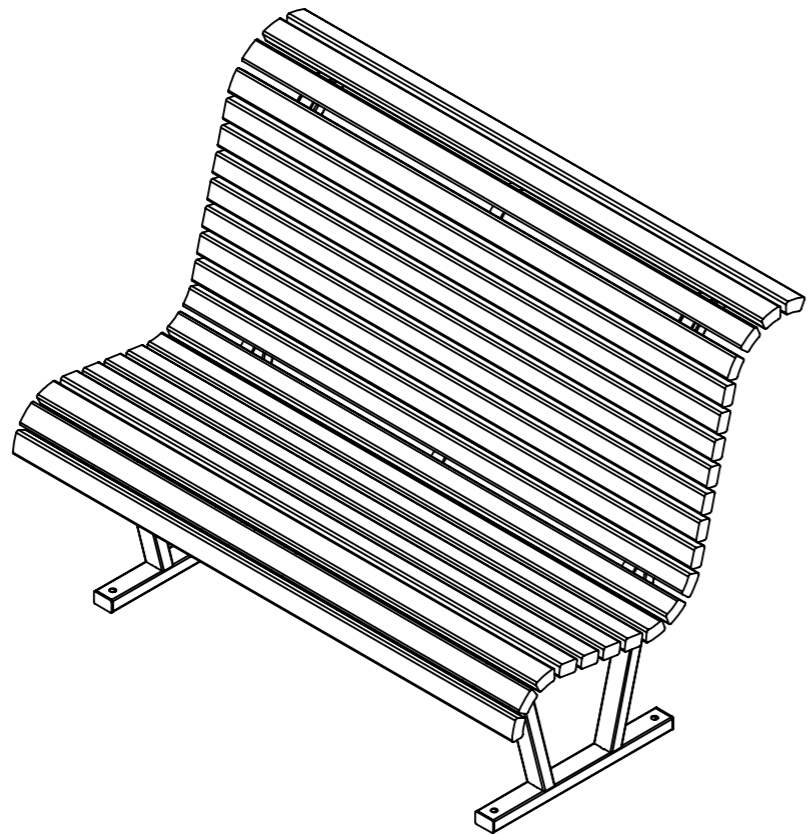
Table of contents

nola

Nola Industrier AB   *Order, offert, & export:* Malmö +46 (0)40 17 11 90
Produktutveckling: Stockholm +46(0)8 702 19 60   www.nola.se

1(10)

Cane Europa
Overview
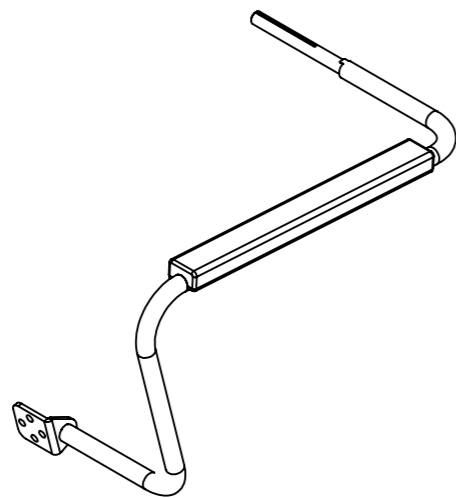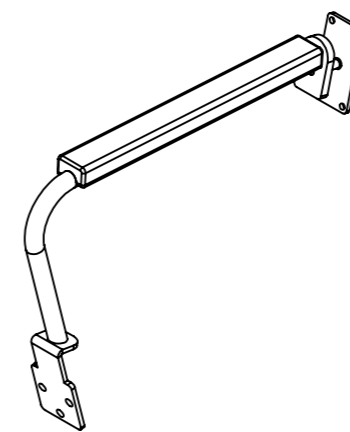
U19-08
Cane Europa

U19-08AH
Cane Europa,
armrest right

U19-08AV
Cane Europa,
armrest left

U19-08AM
Cane Europa,
armrest middle

nola

Nola Industrier AB   *Order, offert, & export:* Malmö +46 (0)40 17 11 90
Produktutveckling: Stockholm +46(0)8 702 19 60   www.nola.se

2(10)

Cane Europa
Fastening
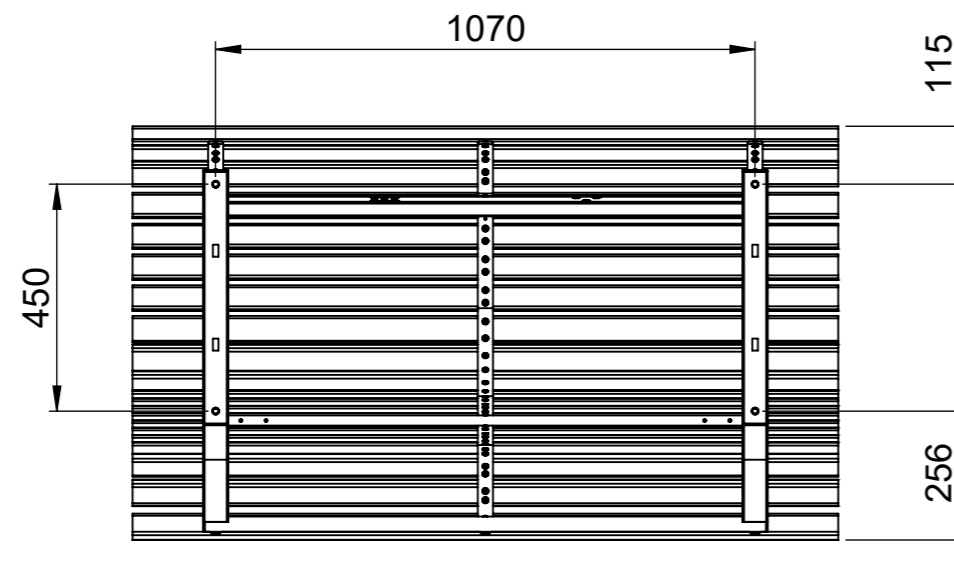
Cane Europa is prepared for ground anchoring with two holes per ground tube, one at each end. A total of four Ø14mm holes per bench for attachment with 12 mm bolts.

Regardless of whether the bench is secured with bolts or nuts, a washer should be used to protect the powder coat.
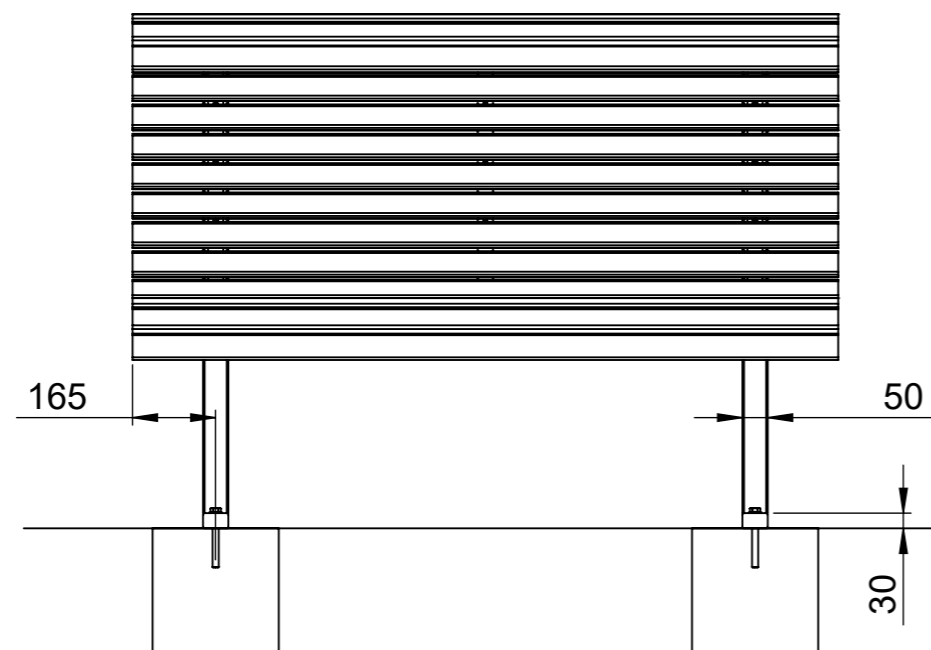
Mounting on wooden surfaces

Pre-drill and install with coach screws. Either mark the exact positions of the holes according to the bench's hole pattern and pre-drill before placing the bench, or carefully pre-drill through the sofas own holes, carefully not to damage the powder coat.

Mounting on cobblestone or paving slabs

Undercast the slabs with concrete. Complete the surface with paving stones. There should be no setting sand between the stones and the concrete. Drill through the stone down into the concrete for expansion bolts or chemical anchors. Secure the sofa according to the instructions.

Mounting on concrete or stone blocks, etc.

Install using chemical anchors or expansion bolts as described above.

nola

Nola Industrier AB   *Order, offert, & export:* Malmö +46 (0)40 17 11 90
Produktutveckling: Stockholm +46(0)8 702 19 60   www.nola.se

3(10)

Cane Europa
Assembly right/left armrest
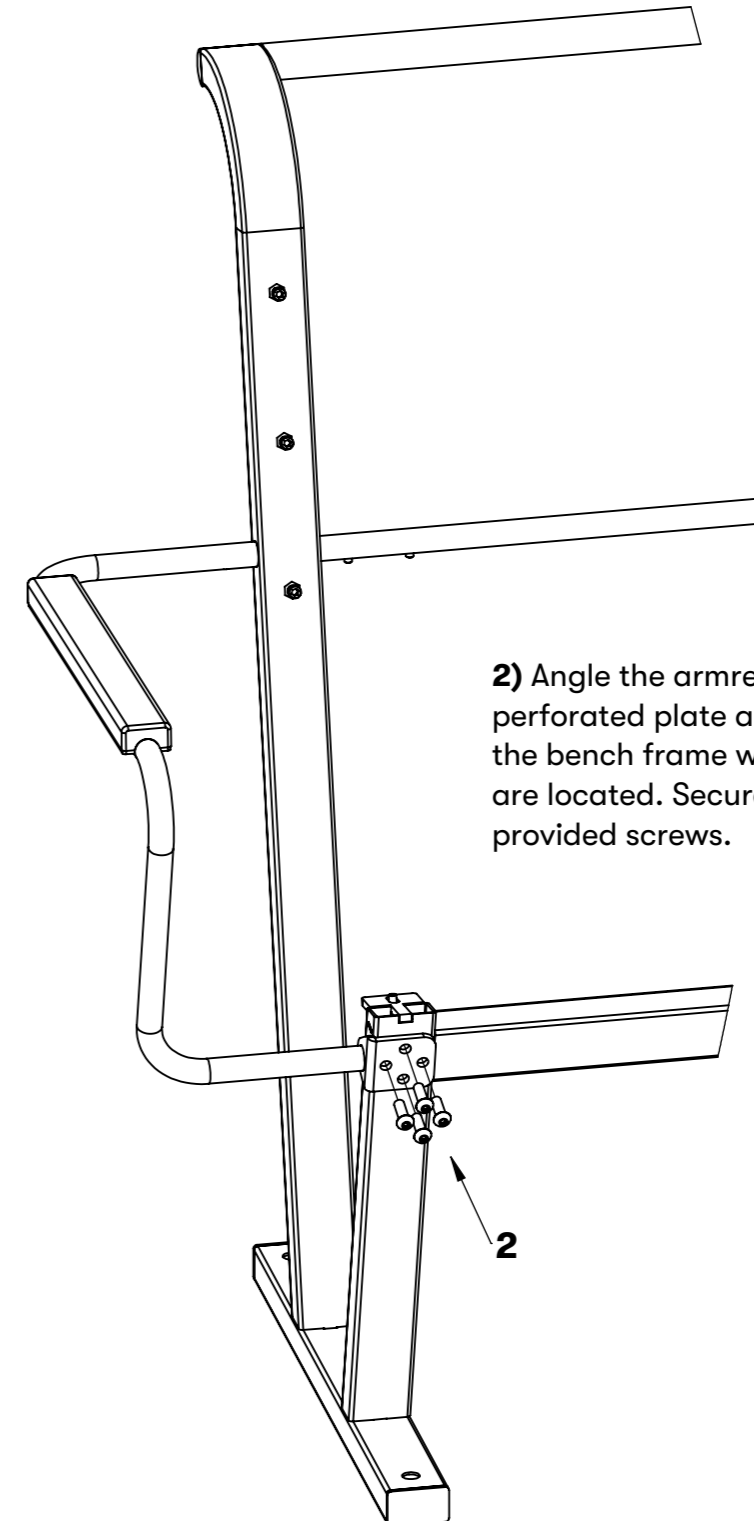
The armrests generally comes assembled with the sofa. These are instructions in case the right or left armrest has to be assembled to the sofa afterwards.

1) Insert the armrests rod into the tube in the back of the sofa.

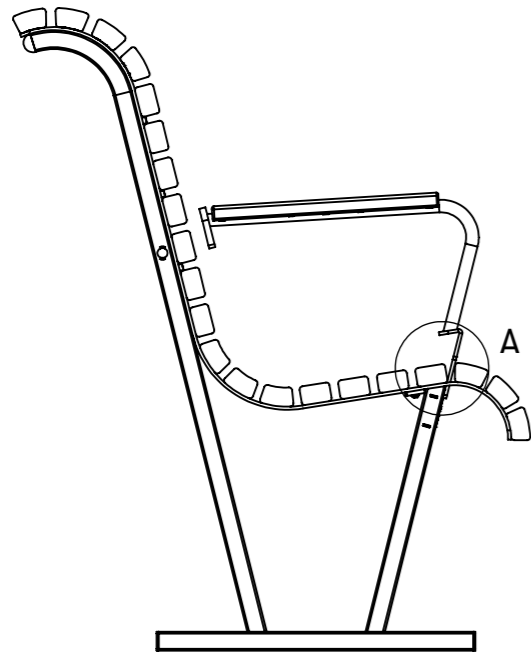**3)** Fasten the rod in the tube with the set screws
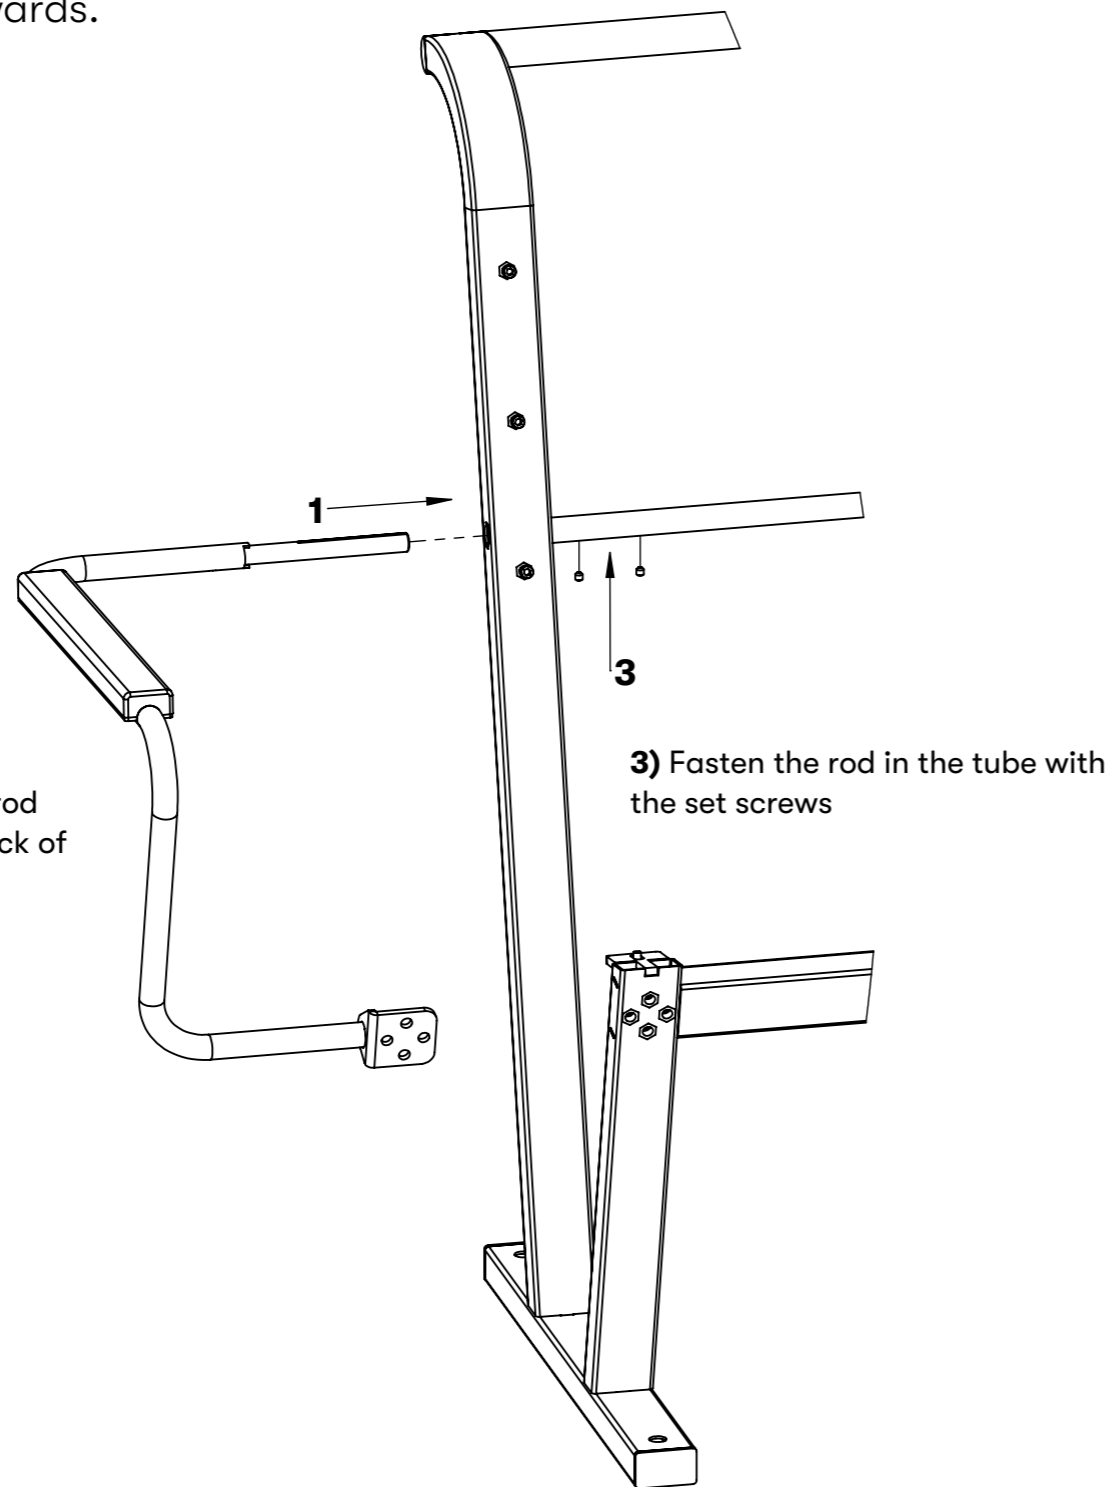
2) Angle the armrest so that its perforated plate aligns with the front of the bench frame where the insert nuts are located. Secure it firmly with the 4 provided screws.
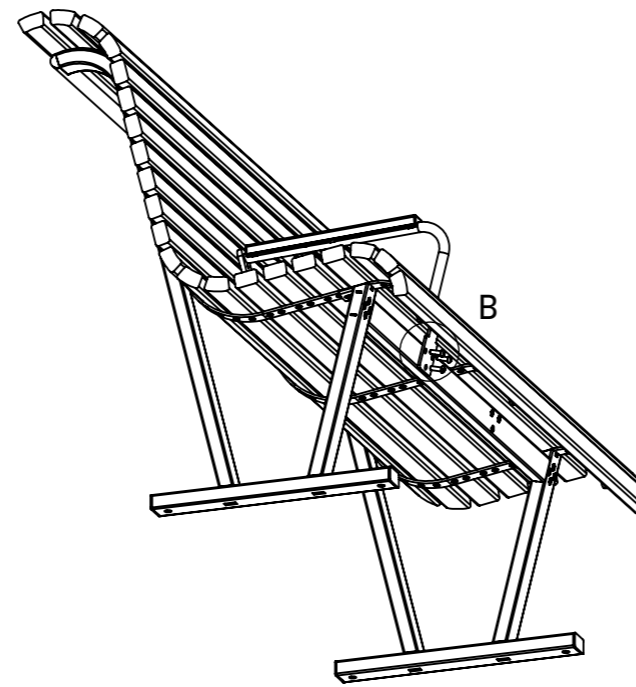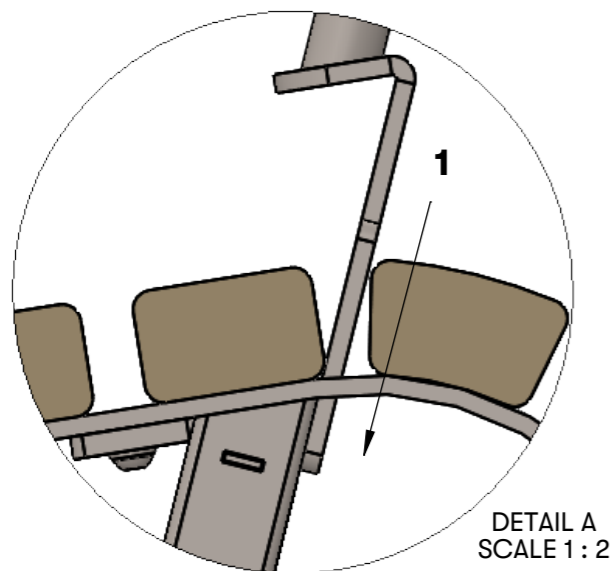
nola

Nola Industrier AB   *Order, offert, & export:* Malmö +46 (0)40 17 11 90
Produktutveckling: Stockholm +46(0)8 702 19 60   www.nola.se

4(10)

Cane Europa
Assembly middle armrest
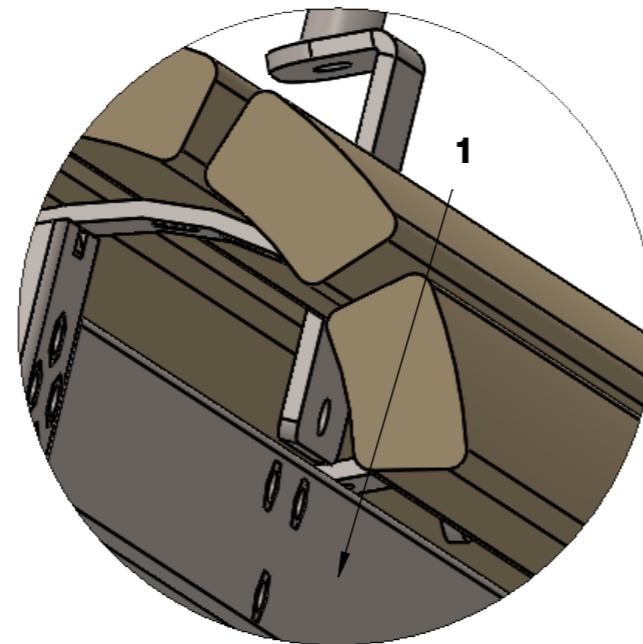
1) Insert the front perforated plate of the armrest between the bench's boards so that the plate sits flush with the bench's longitudinal tube and the holes align with the bench's insert nuts.
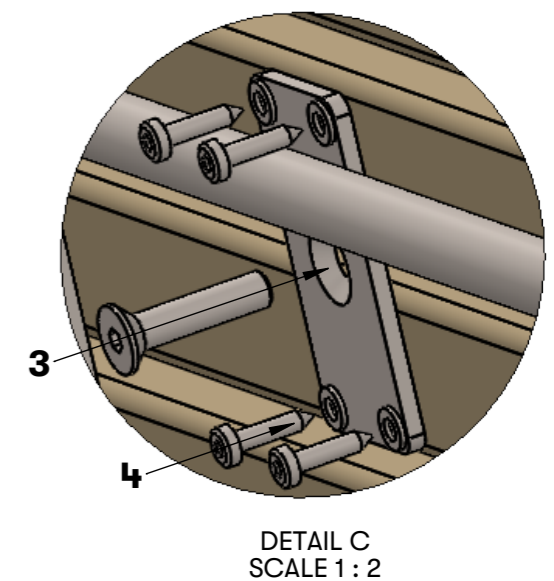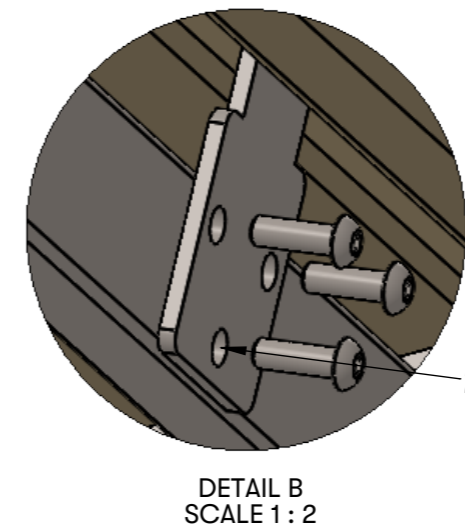
2) Attach the front plate of the armrest with the 3 provided screws. Do not fully tighten them; leave a bit of wiggle room.
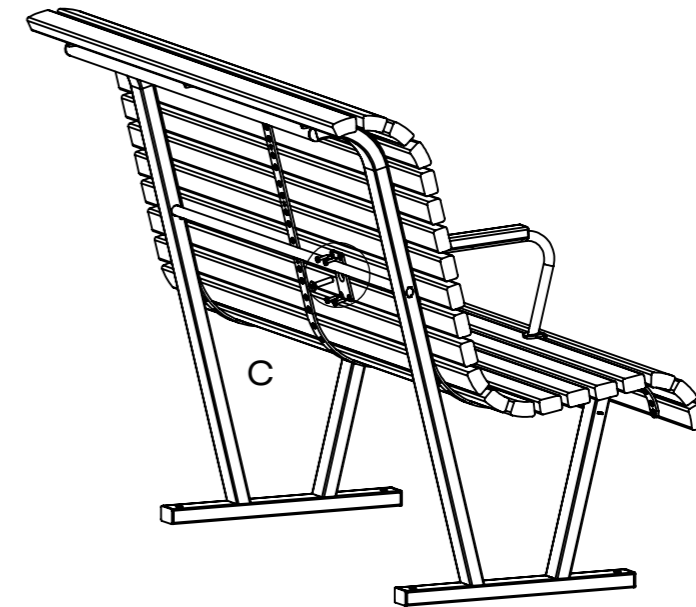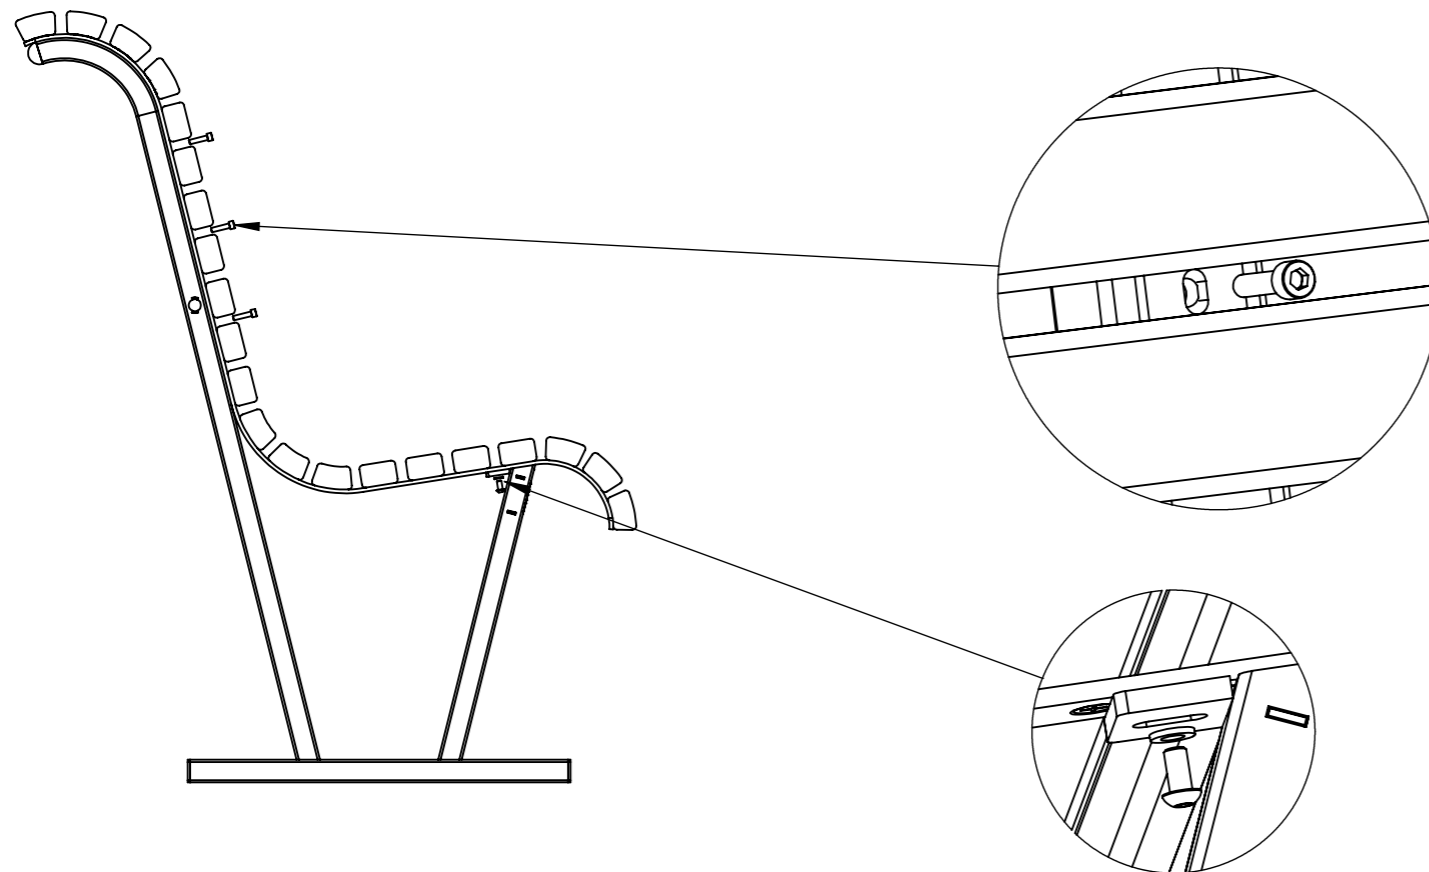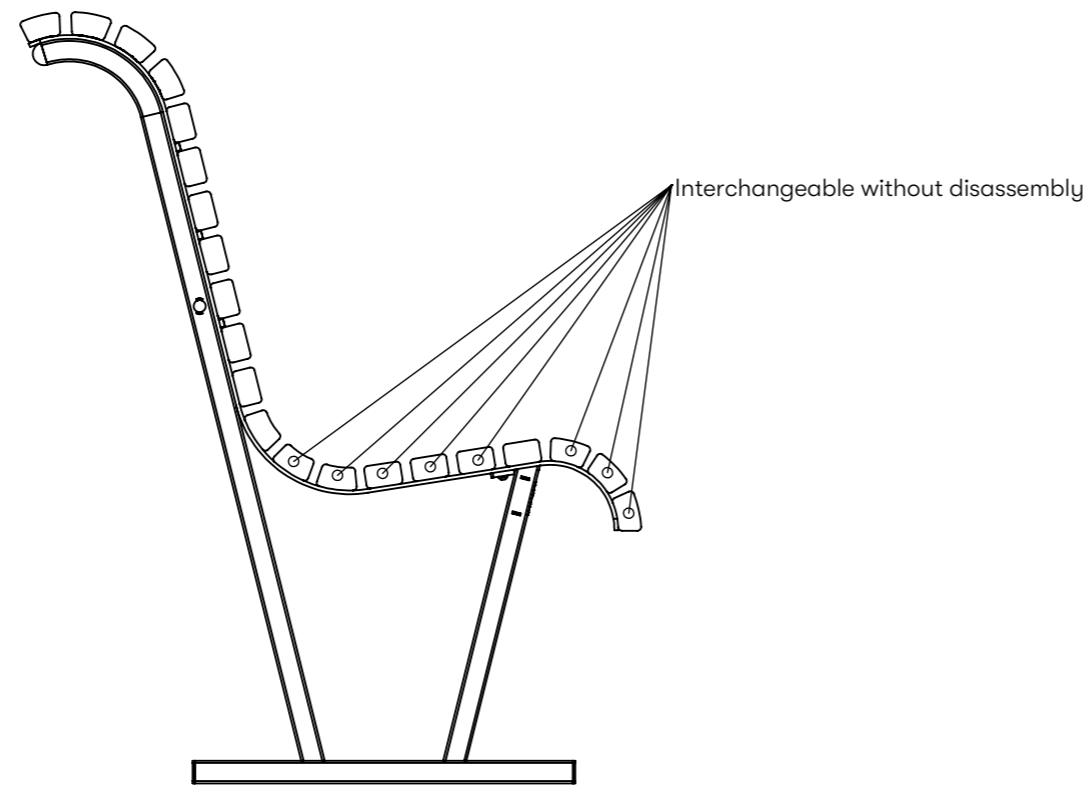
3) Align hole in the clamp plate with the threaded hole in the rear plate of the armrest and screw them together with the countersunk bolt between the backrest boards. Tighten the bolt so that the plates clamp the back boards firmly, ensuring the clamp plate sits straight.

4) Secure the clamp plate to the boards with the 4 wood screws.

DETAIL A
SCALE 1 : 2

DETAIL B
SCALE 1 : 2

DETAIL C
SCALE 1 : 2

Nola Industrier AB   *Order, offert, & export:* Malmö +46 (0)40 17 11 90
Produktutveckling: Stockholm +46(0)8 702 19 60   www.nola.se

5(10)

Cane Europa
Dissassembly

Interchangeable without disassembly

Repair:
If individual boards need to be replaced, this can be done on-site. First, contact Nola for replacement boards. Most of the boards in the seat can be replaced without removing the entire seat from the sofa. However, if the boards in the backrest need to be replaced, the seat must be detached and lifted off. Loosen the screws under the seat and in the backrest. Lift off the seat and place it on a surface that won't damage the wood or the powder coating. Replace the boards and remount the seat onto the sofa.

For more extensive repairs, the sofa should preferably be returned in its whole to Nola. Loosen the ground bolts and save them. Clean the bench of any gravel or debris that could scratch the coating during shipping. Pack the bench well to prevent any other damage during transit.
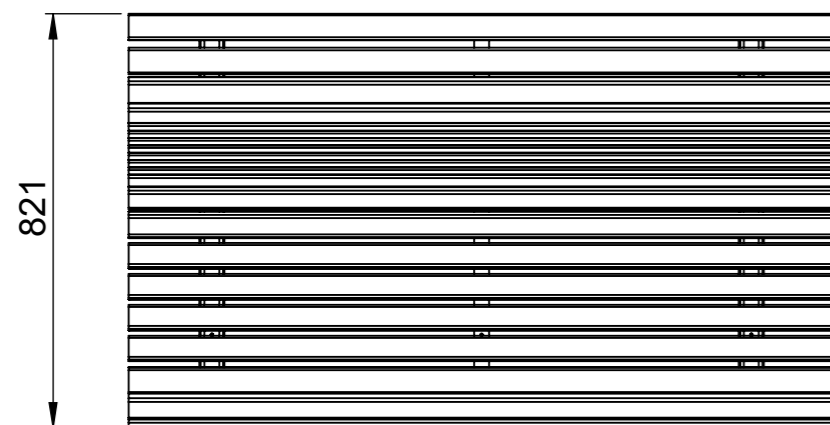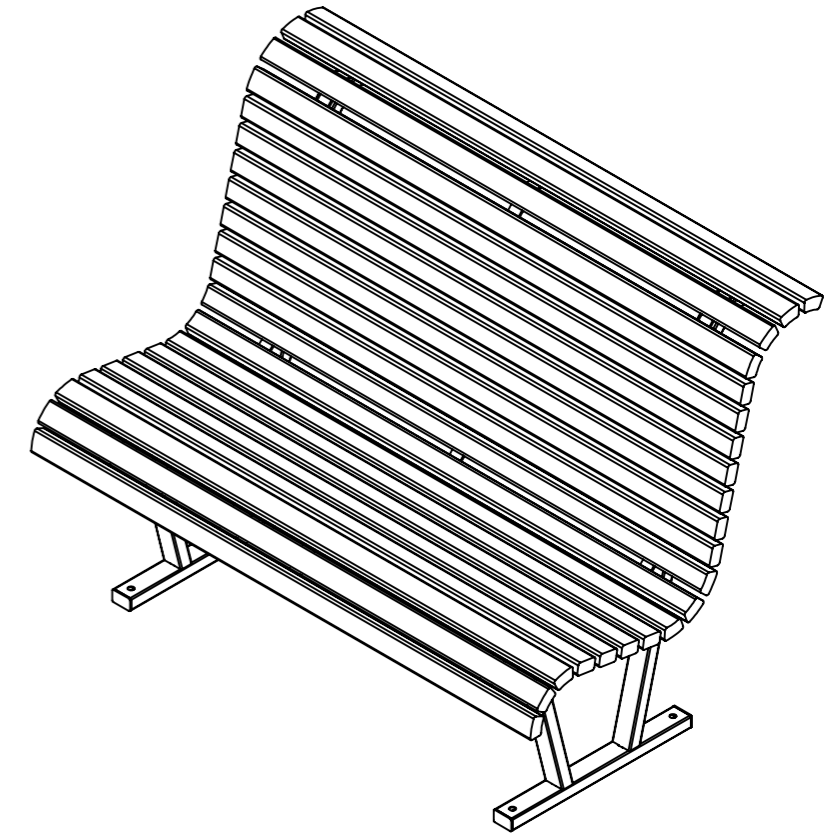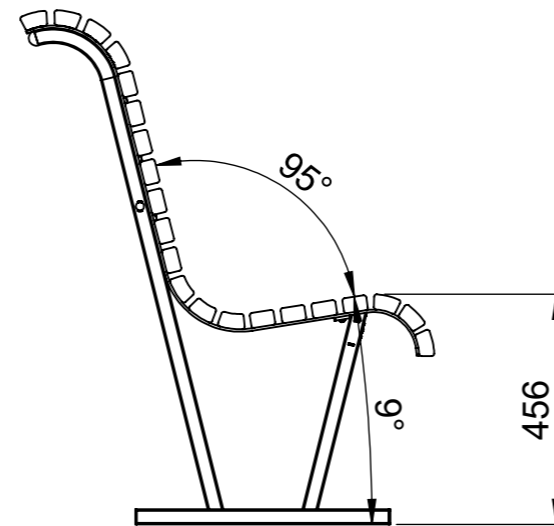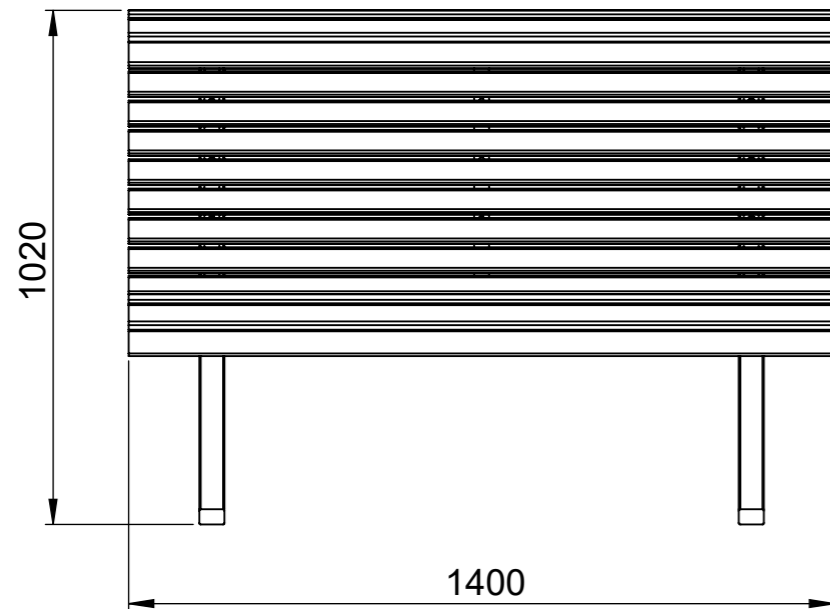
Recycling:
When dismantling, all screws should be removed. The wood (if further reuse or processing is not possible) should be sorted as combustible waste. All screws are stainless steel (A2) and should be sorted as stainless steel. All other painted parts are made of steel and should be sorted as metal.

nola

Nola Industrier AB   *Order, offert, & export:* Malmö +46 (0)40 17 11 90
Produktutveckling: Stockholm +46(0)8 702 19 60   www.nola.se

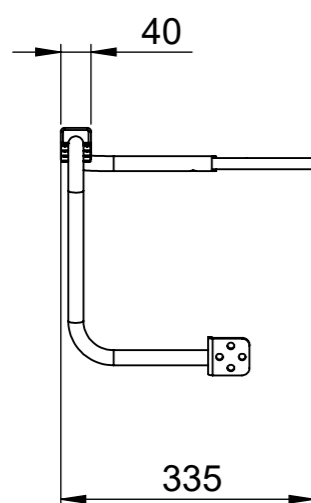6(10)

Cane Europa
Product information sofa

1020

1400

821

95°

456

6°

U19-08
Cane Europa
Weight 42 kg

Delivered fully assembled

nola

Nola Industrier AB   *Order, offert, & export:* Malmö +46 (0)40 17 11 90
Produktutveckling: Stockholm +46(0)8 702 19 60   www.nola.se

7(10)

Cane Europa
Product information Armrest right

60

678

446

158

222

94

40

500

328

335
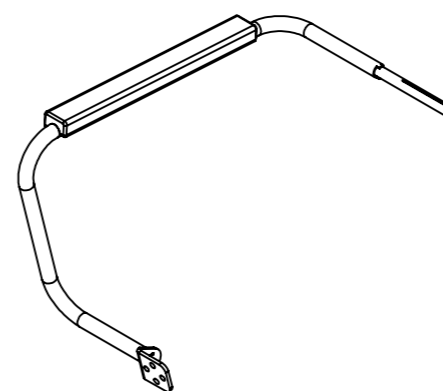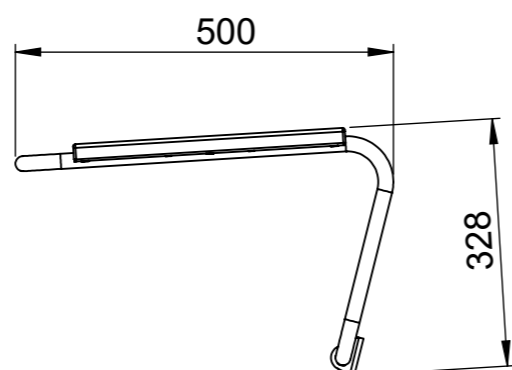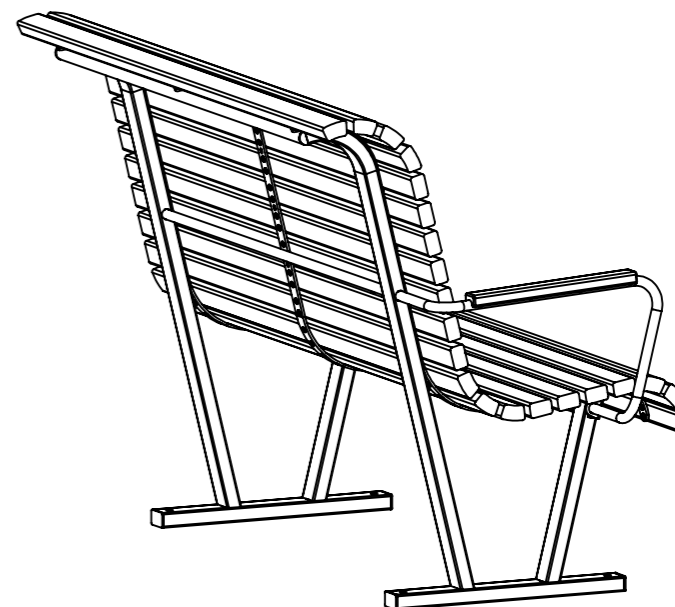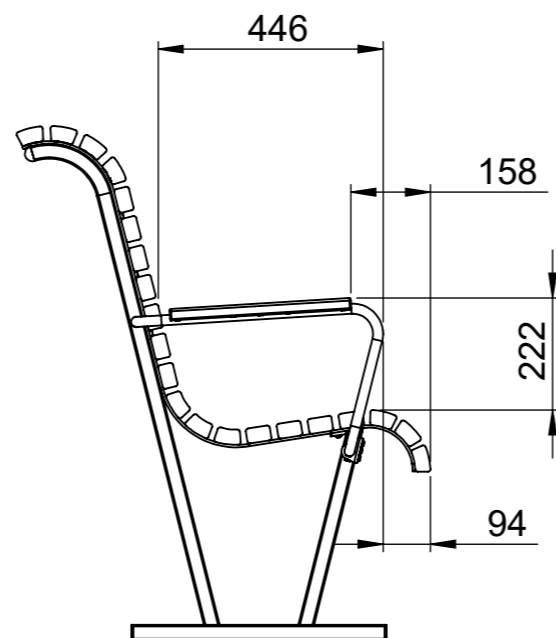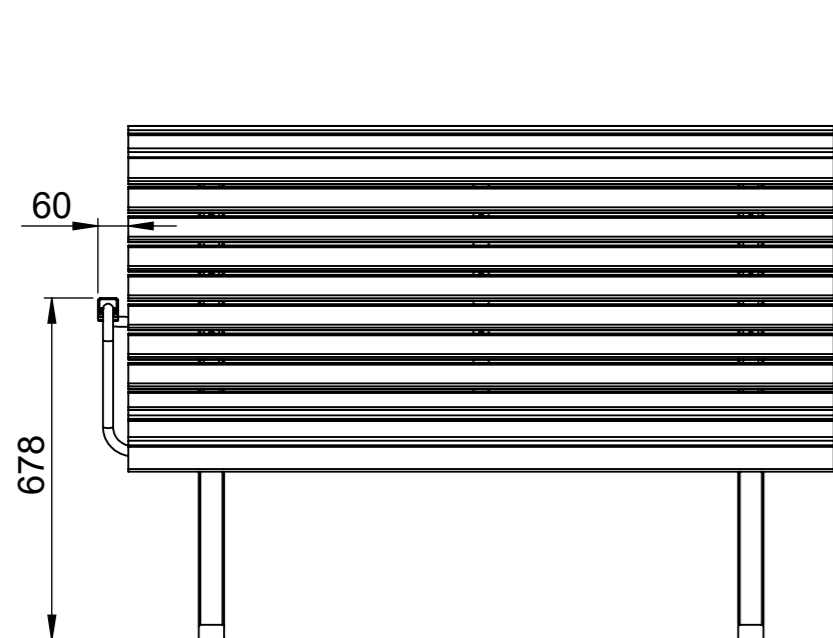
U19-08AH
Cane Europa, Armrest right
Weight 1.5 kg

Includes 4 pieces M8x25 screws +
washers and 2 pieces M6x6 set screws

Delivered assembled to the sofa
unless otherwise agreed.

Nola Industrier AB   *Order, offert, & export:* Malmö +46 (0)40 17 11 90
Produktutveckling: Stockholm +46(0)8 702 19 60   www.nola.se

8(10)

nola

Möbelgrupp
Product information Armrest left

U19-08AV
Cane Europa, Armrest left
Weight 1.5 kg

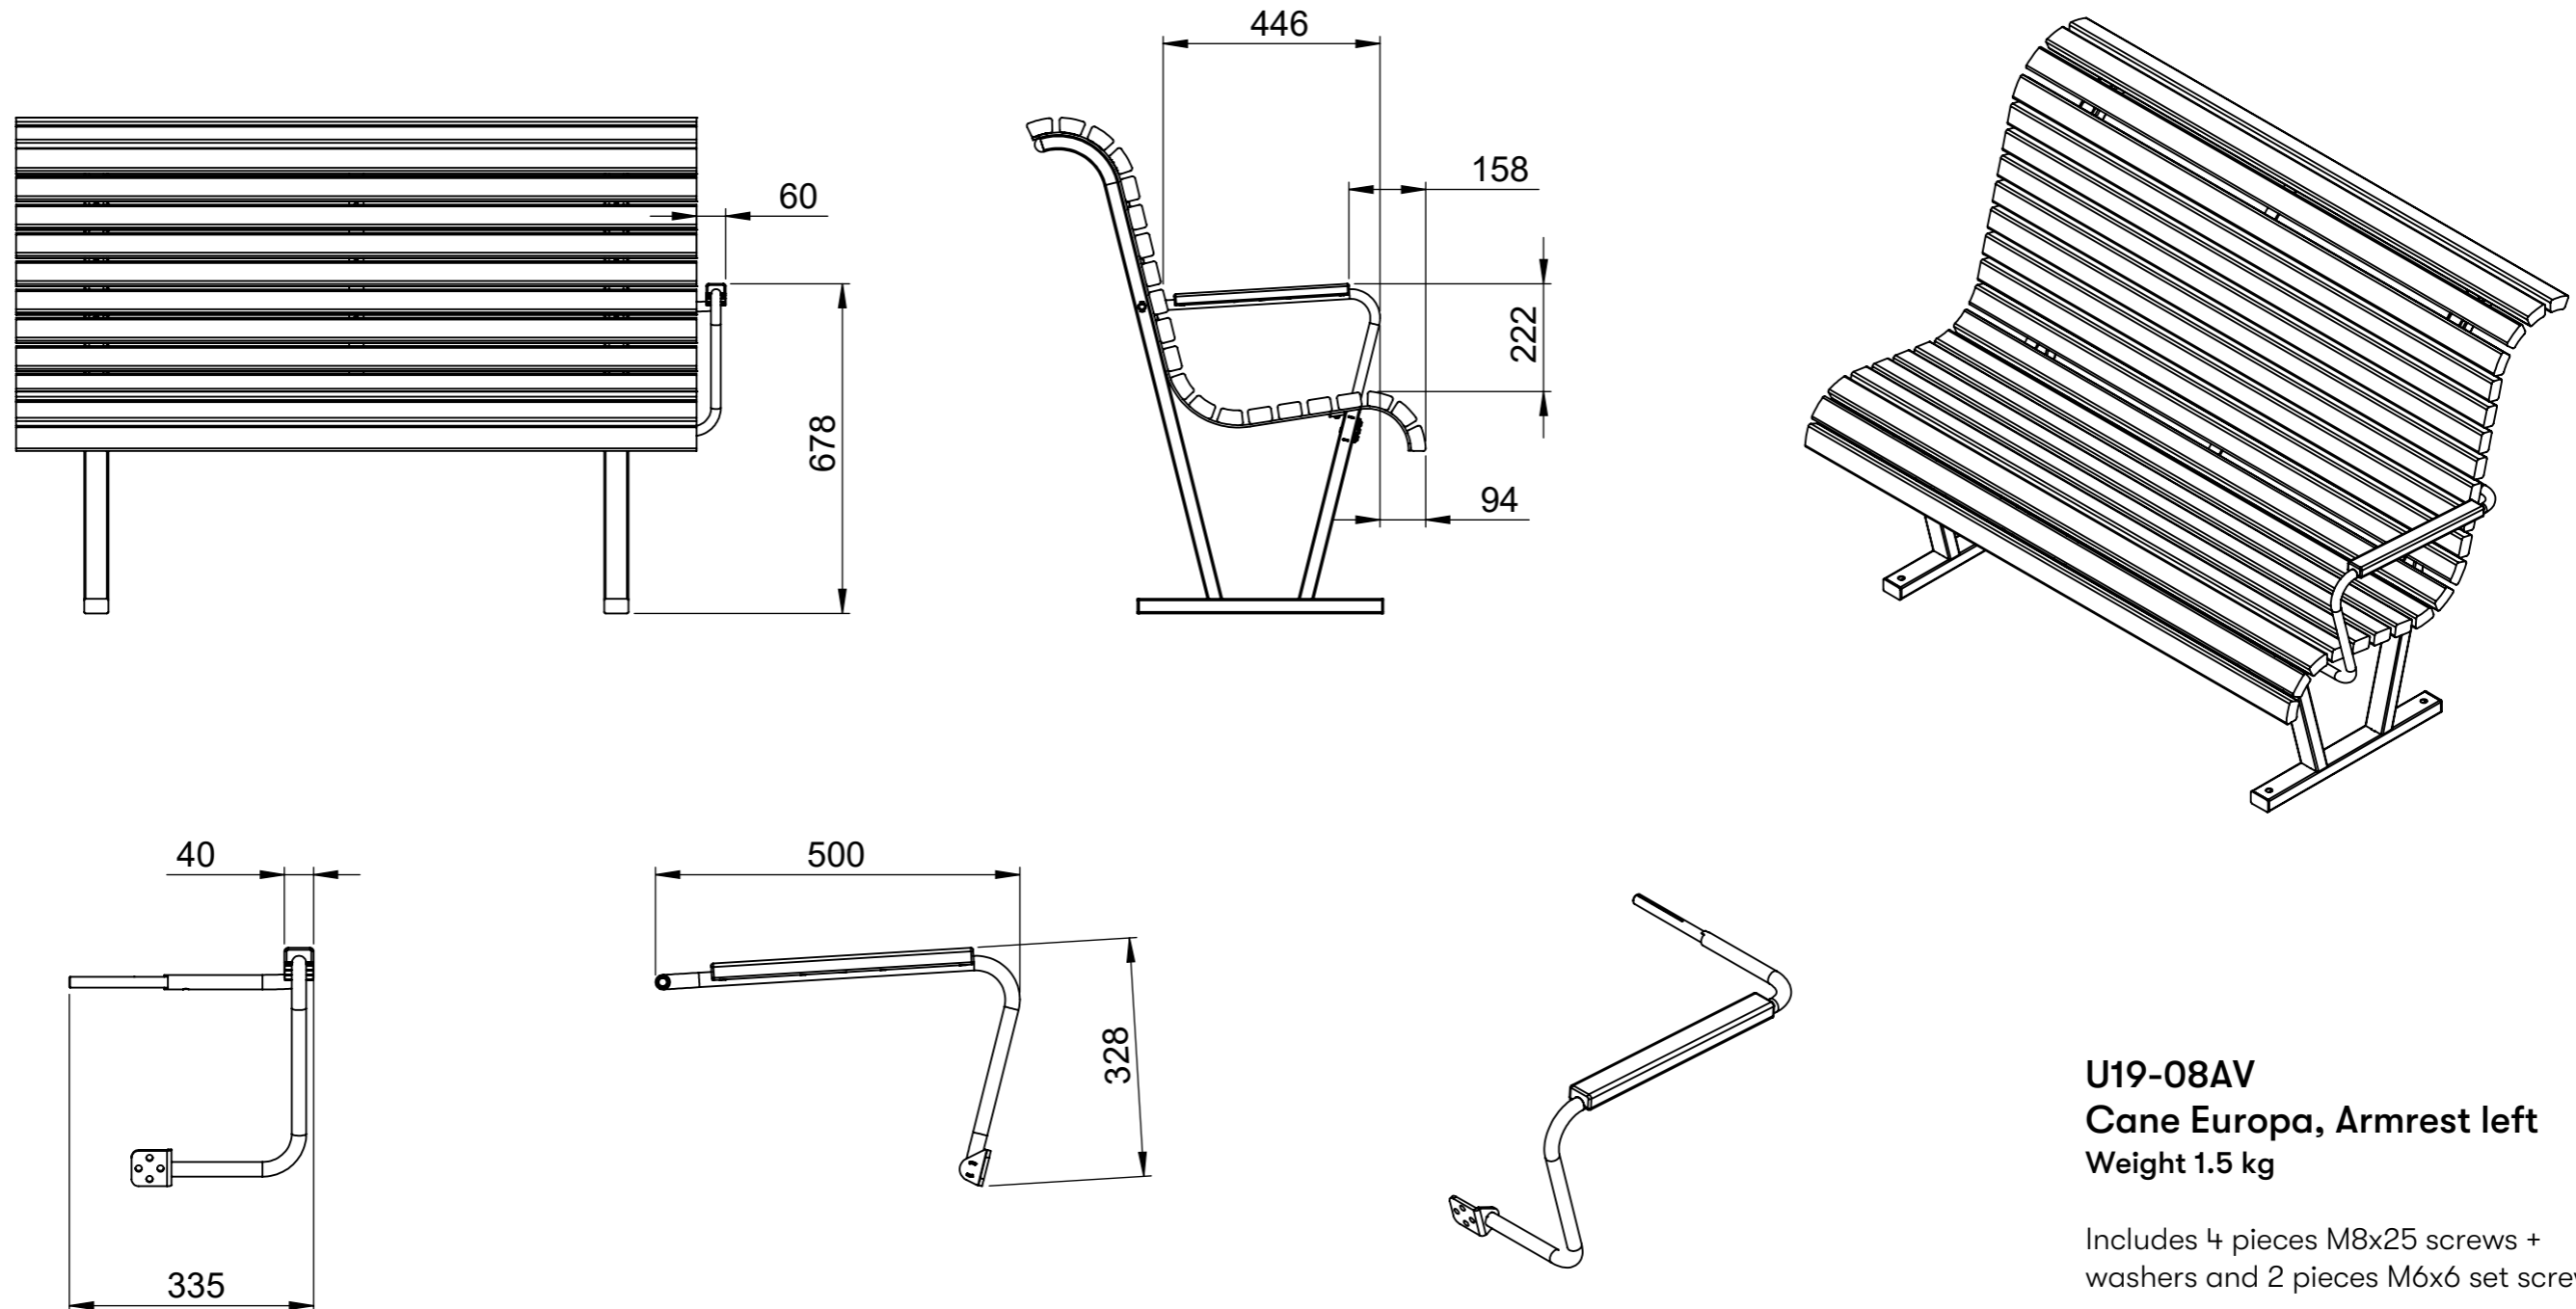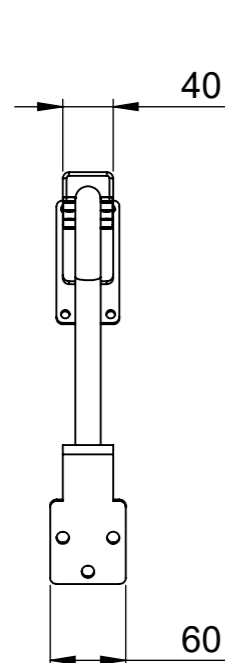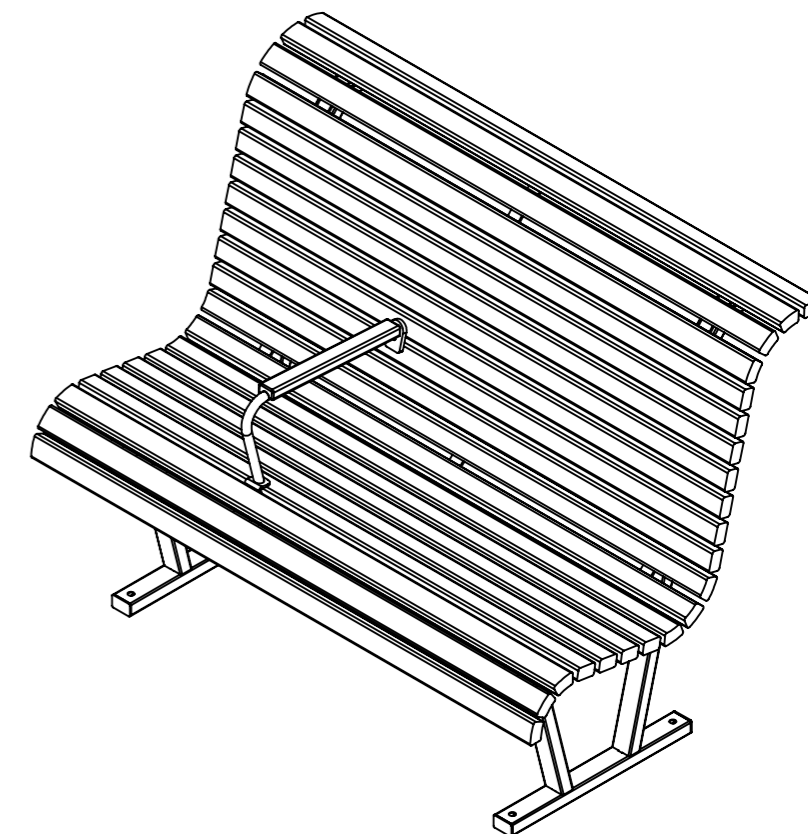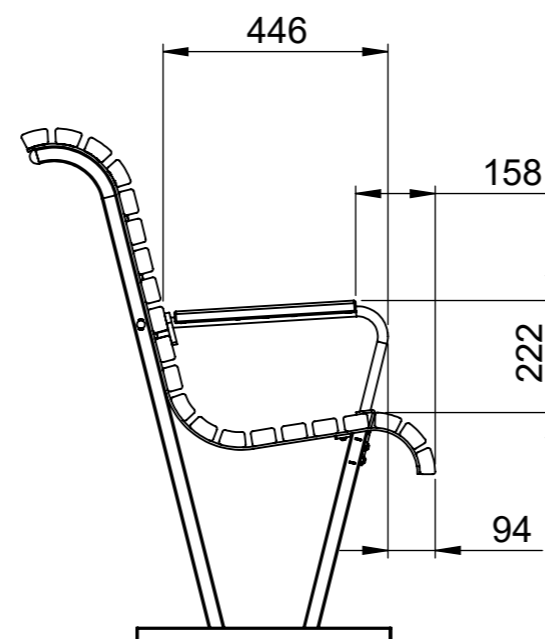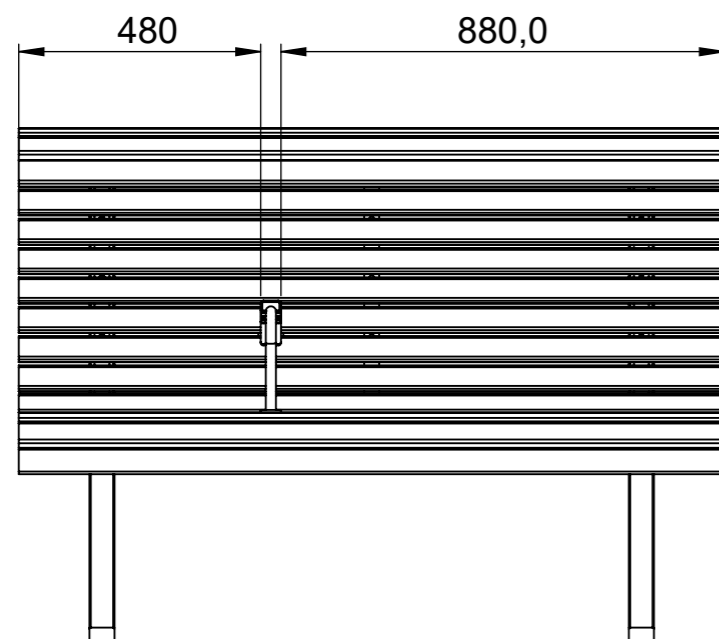Includes 4 pieces M8x25 screws + washers and 2 pieces M6x6 set screws

Delivered assembled to the sofa unless otherwise agreed.

nola

Nola Industrier AB   *Order, offert, & export:* Malmö +46 (0)40 17 11 90
Produktutveckling: Stockholm +46(0)8 702 19 60   www.nola.se

9(10)

Möbelgrupp
Product information Armrest middle

480 880,0

446

158

222

94

40

480

327

60
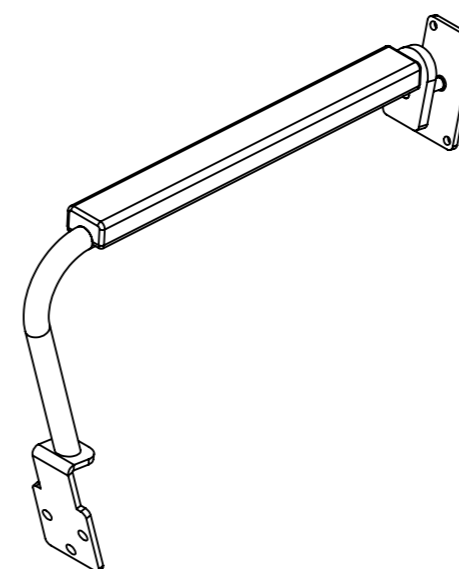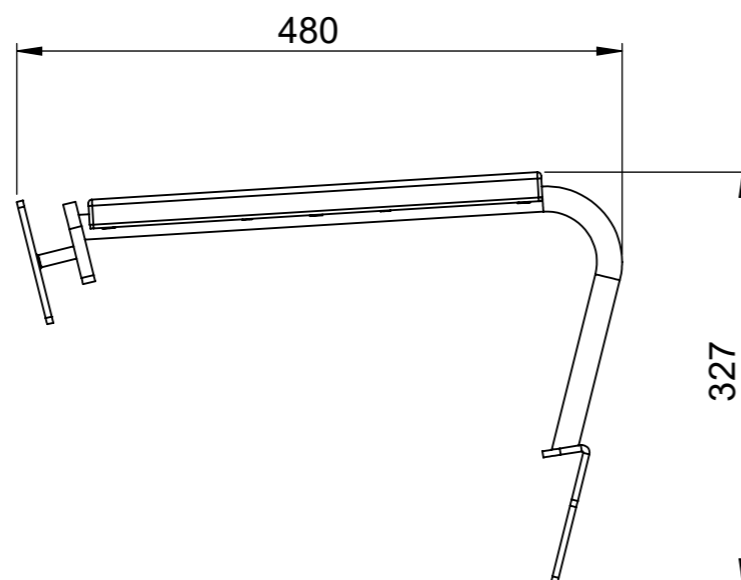
U19-08AM
Cane Europa, Armrest middle
Weight 1.5 kg

Includes 3 pcs M8x25 screws + washers,
1 M10x55 and 4 pcs wooden screws
6x25 mm

Delivered assembled to the sofa
unless otherwise agreed.

nola

Nola Industrier AB   *Order, offert, & export:* Malmö +46 (0)40 17 11 90
Produktutveckling: Stockholm +46(0)8 702 19 60   www.nola.se

10(10)