


Alnön

ASSEMBLY DESCRIPTION

nola

Headoffice: Nola Industrier AB Repslagargatan 15b Box 17701 S-118 93
 Stockholm T:+46(0)8 702 19 60 F:+46(0)8 702 19 62
 E:headoffice@nola.se Sales/showroom: Skeppsbron 3 S -211
 20 Malmö T:+46(0)40 17 11 90 Order fax:+46(0)40 12 75 45

www.nola.se

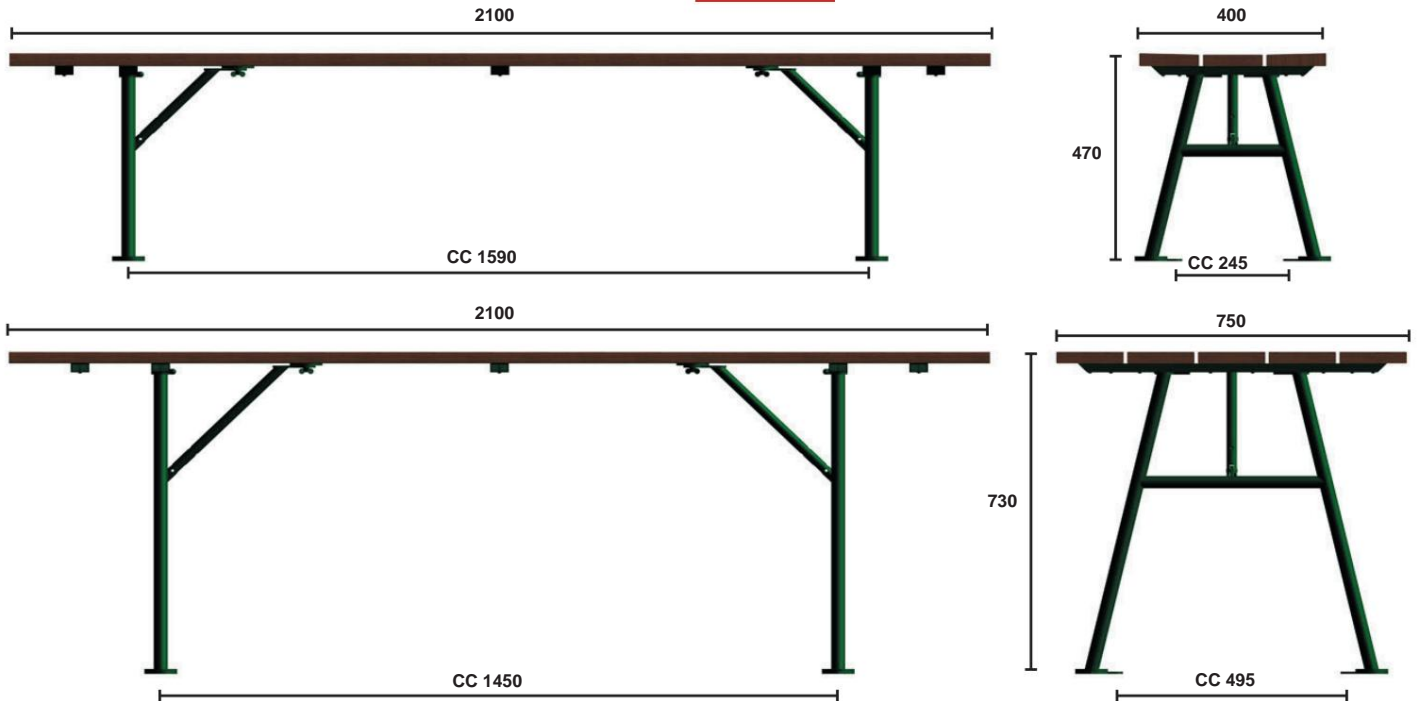

Specifications/


U01-11 Bench Alnön.

U01-12 Table Alnön.

U01-13 Fixing iron, set of 4 pcs.

Delivery specification/

U01-11	1 pc
Tables are delivered folded in a cardboard box	
U01-12	1 pc
Bench is delivered folded in a cardboard box	
U01-13	4 pcs
Fixing bracket	4 pcs
Countersunk screw M8 x 12	

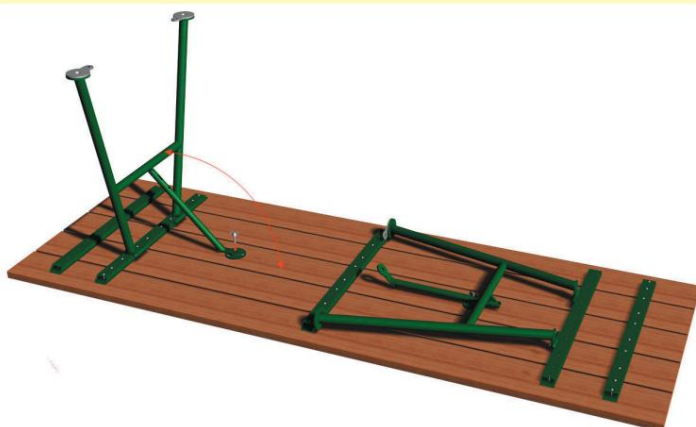

Mounting/

The bench and table are delivered folded. Loosen the wing screw, fold up the legs and replace the wing screw. See picture.

Attachment/

Fasteners are ordered separately. The bracket is screwed into the underside of the legs with the included screw. The recess in the plate must be mounted downwards. The holes in the fixing bracket must be directed inwards.

Screw the bench / table to the base with chemical anchors or expanders M10 (not included in the delivery).

Installation on Wooden Substrate/

Mount with wood screws to wooden substrate.

Installation on paving stones or paving slabs/

Undercast the slabs with concrete. There must be no setting sand between the tiles and the concrete. Drill the plate for expanders or chemical anchors. Mounting with an expander provides a removable attachment. Installation with chemical anchors provides a permanent attachment.

Installation on a concrete base/ Drill

the concrete for expanders or chemical anchors. Mounting with an expander provides a removable attachment. Installation with chemical anchors provides a permanent attachment

Installation on gravel or grass/

Excavate the ground for a concrete foundation. Cast a foundation in concrete pipe or cardboard pipe. The top of the foundation must end with a radius. Drill the foundation for expanders or chemical anchors. Fasten the foot to the foundation.

